

INSTRUCTIONmultiframe

ELEMENTS

1 BOTTOM VERTICAL PROFILE WITH HINGE



2 BOTTOM VERTICAL PROFILE WITH LOCK



3 BOTTOM VERTICAL PROFILE



4 DOOR VERTICAL LOWER PROFILE WITH HINGE



5 DOOR VERTICAL LOWER PROFILE WITH HANDLE



6 TOP VERTICAL PROFILE WITH HINGE




7 VERTICAL TOP PROFILE OF THE DOOR WITH HINGE



8 TOP VERTICAL PROFILE



9 VERTICAL TOP PROFILE OF THE DOOR WITH HANDLE



10 FLAT HORIZONTAL PROFILE



11 HORIZONTAL PROFILE



12 HORIZONTAL DOOR PROFILE



13 REAR CROSSROOM



14 SIDE CROSSROOMS



15 DOOR CROSS-BARS



16 PULLING CABLE TO THE DOOR





16 KANTOREK CONNECTORS






AND

B

STEP 1

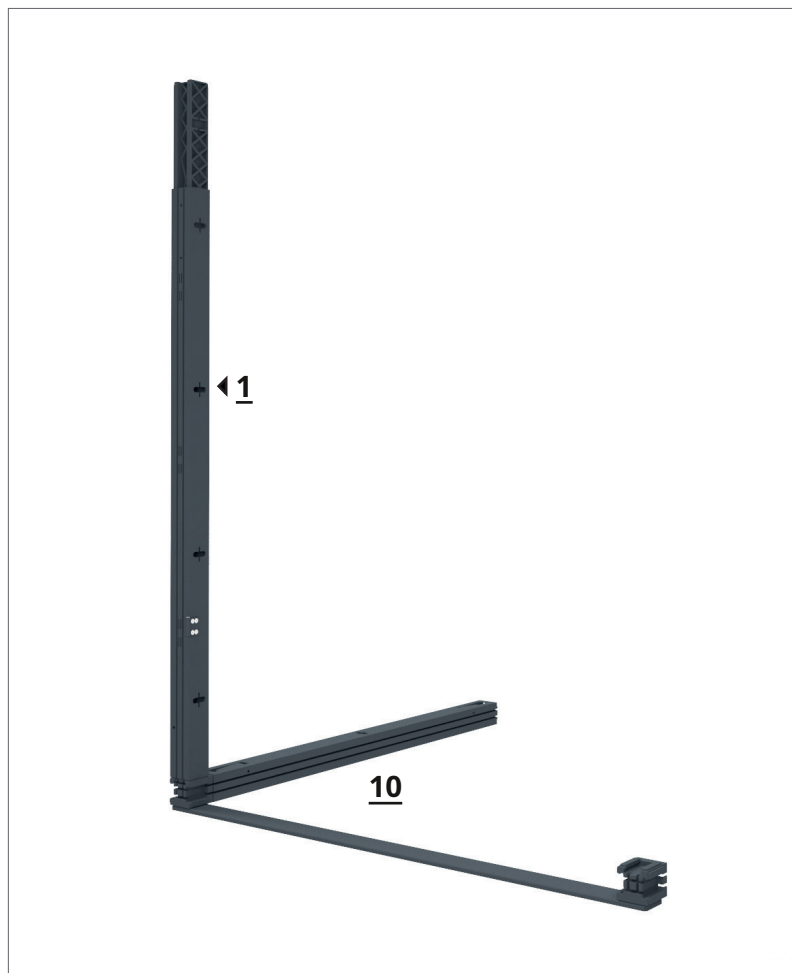
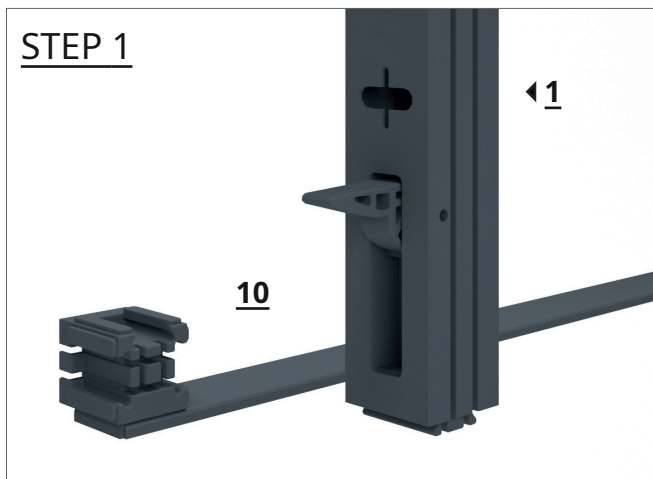


STEP 2

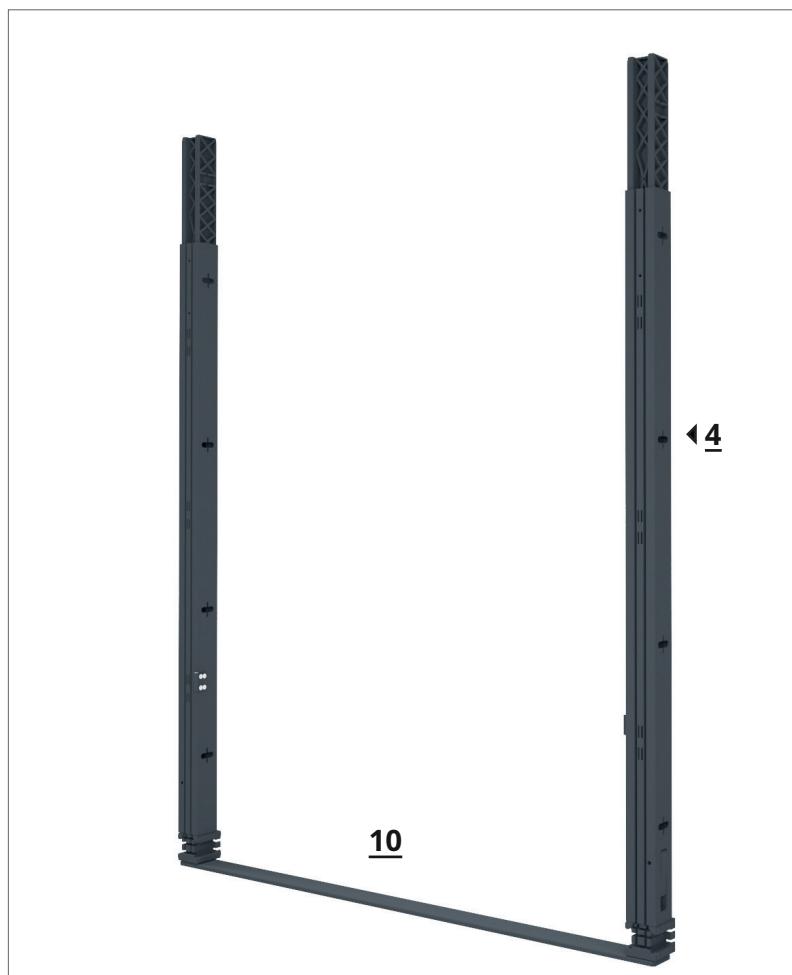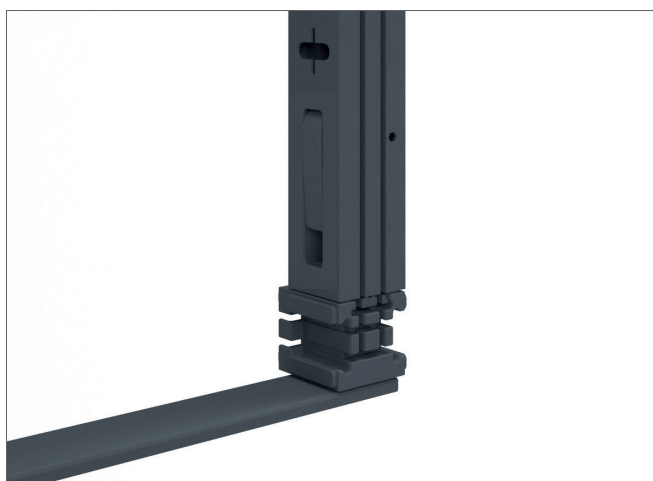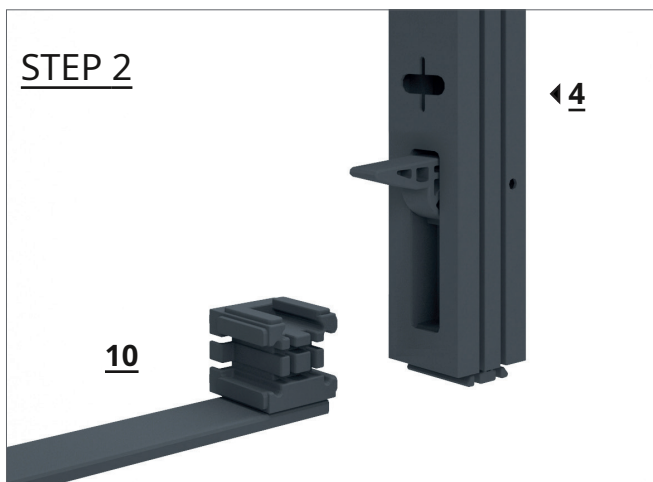


INSTRUCTIONmultiframe


STEP 3

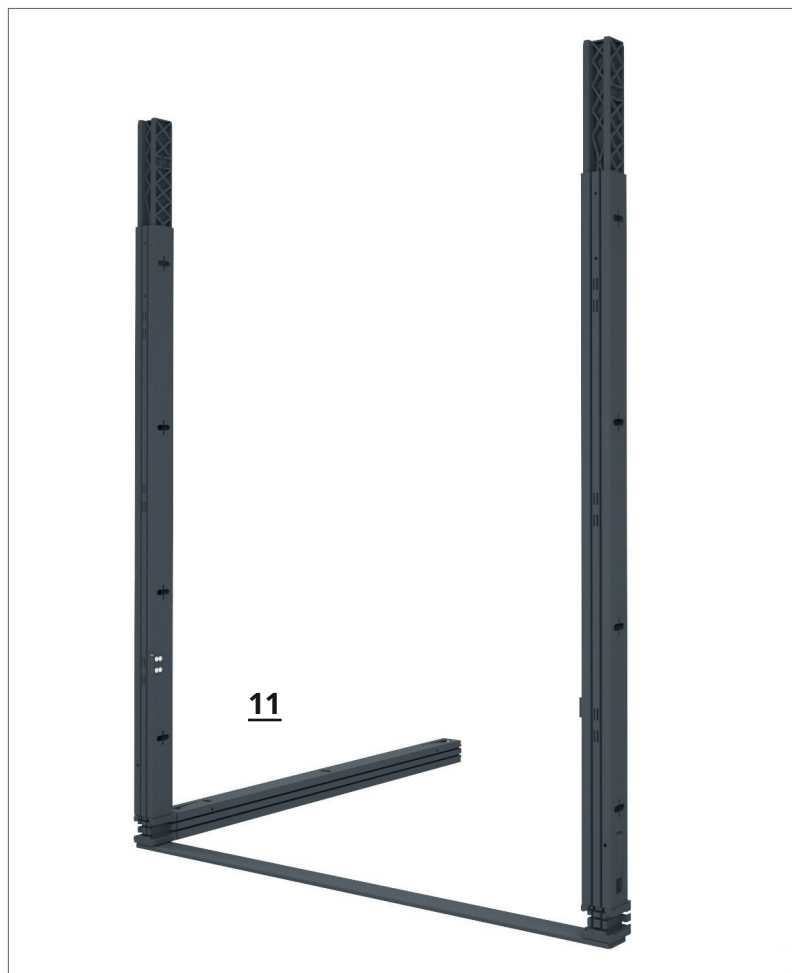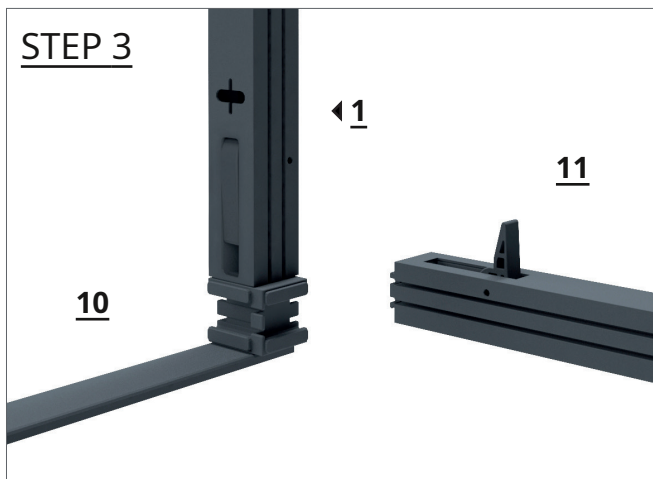


STEP 4

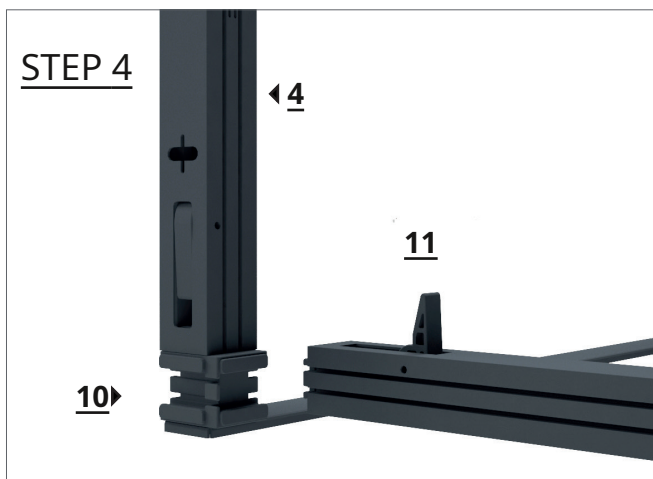

STEP 5

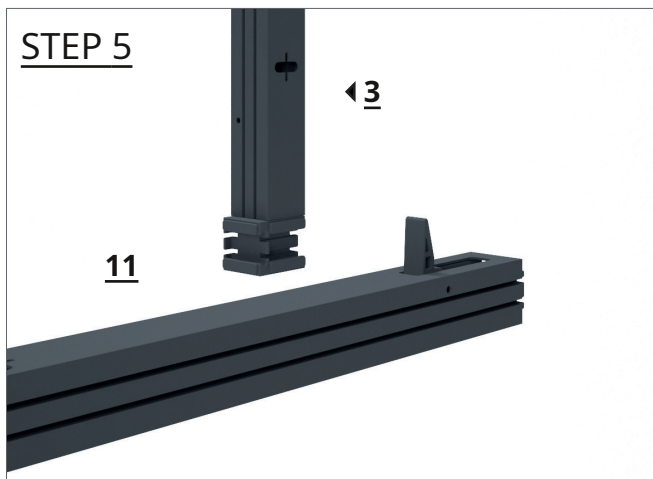



STEP 6

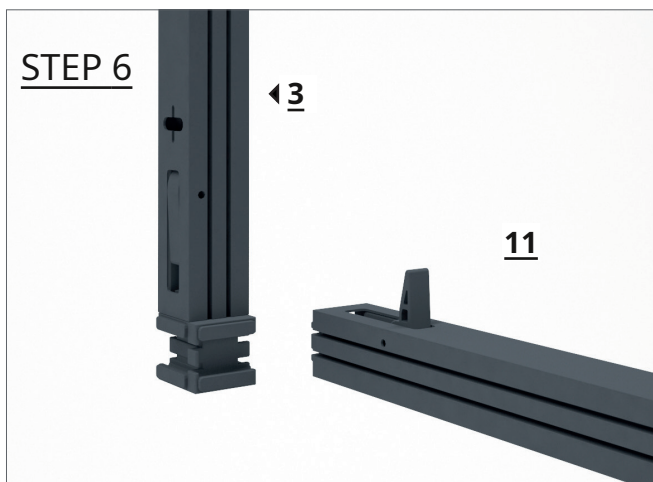


STEP 7




STEP 8

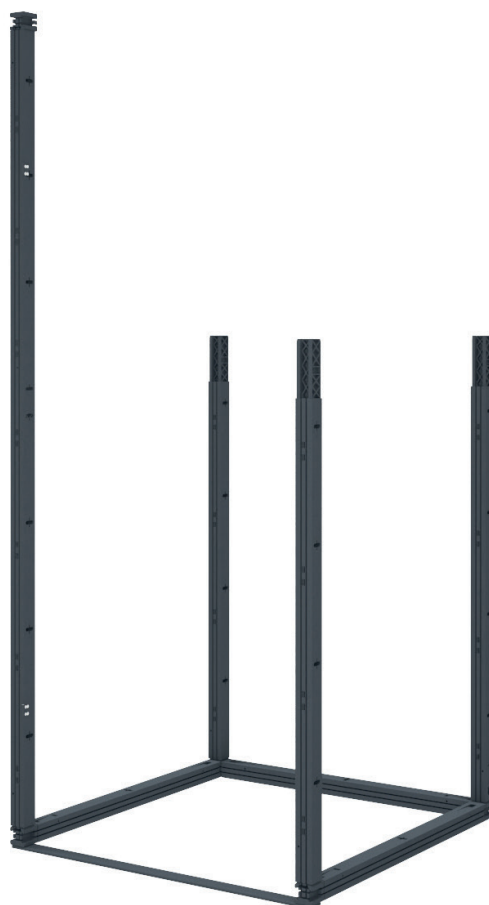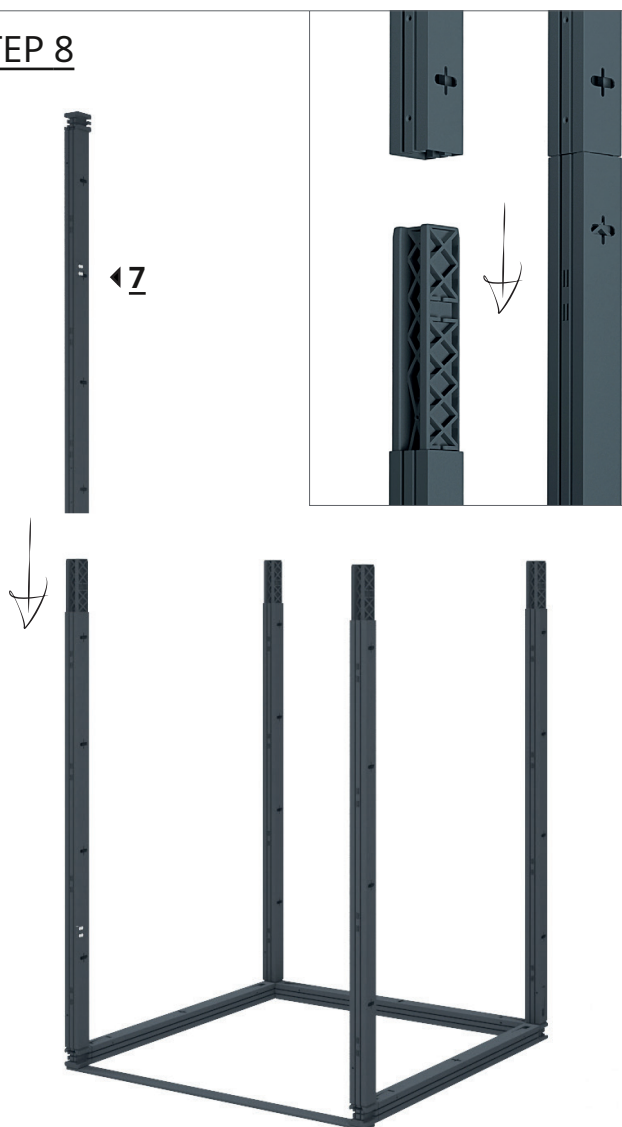




STEP 8

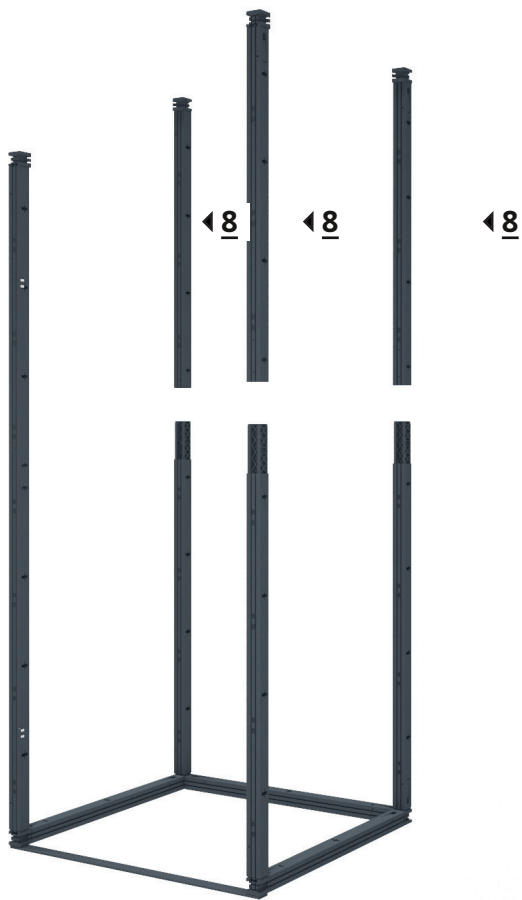


STEP 9, WE PUT IN THE UPPER, HORIZONTAL PROFILES

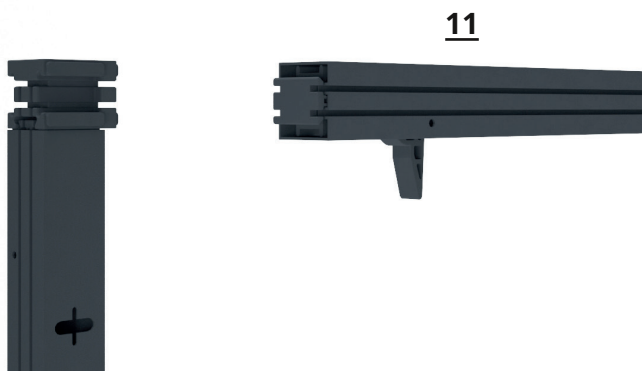


STEP 10

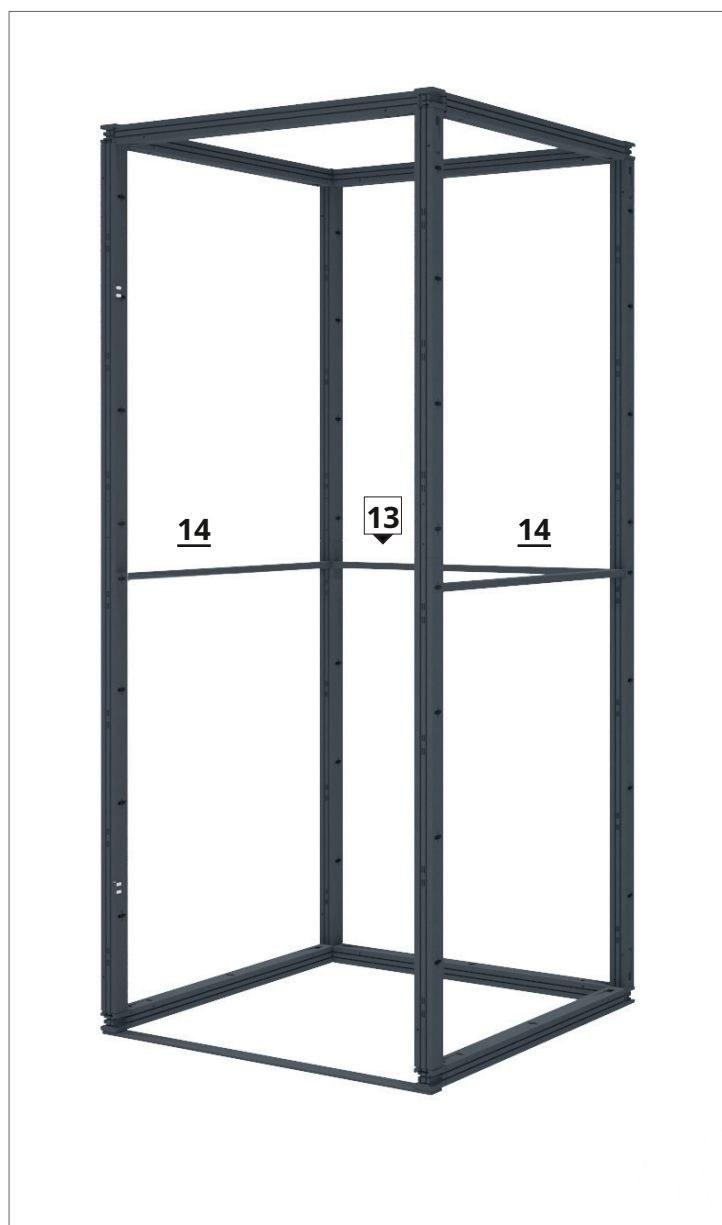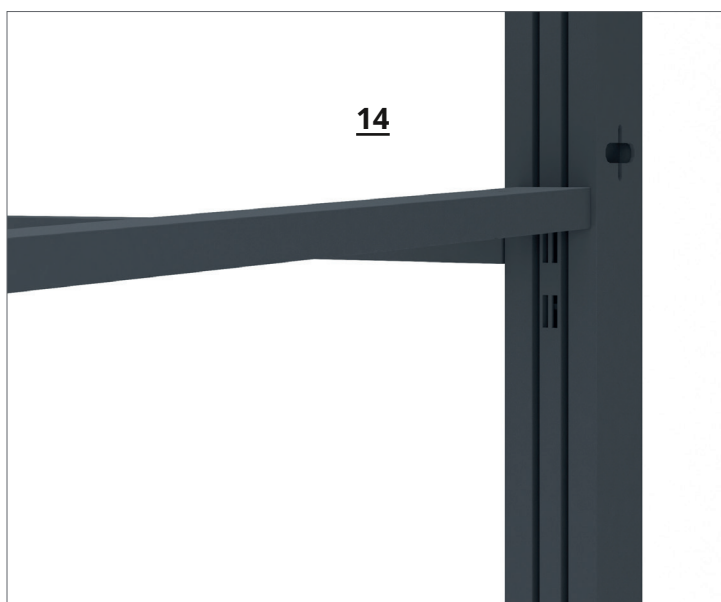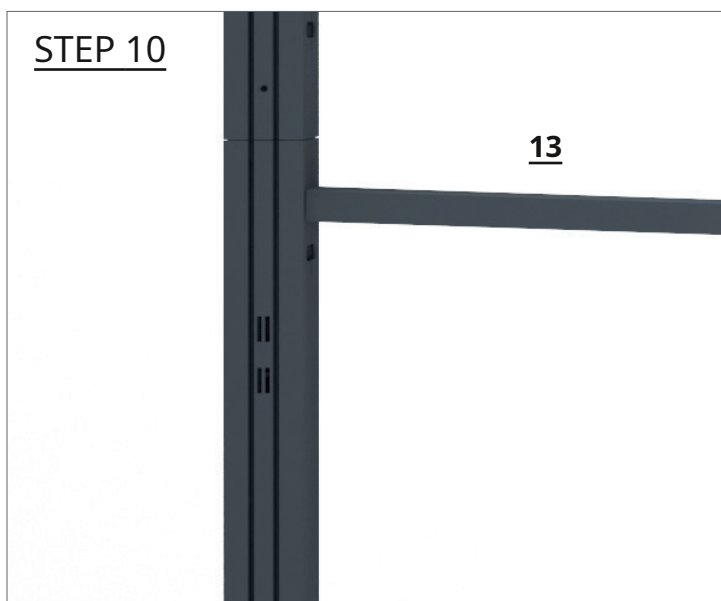



STEP 11 PUTTING THE DOOR TO THE COUNTER'S OFFICE

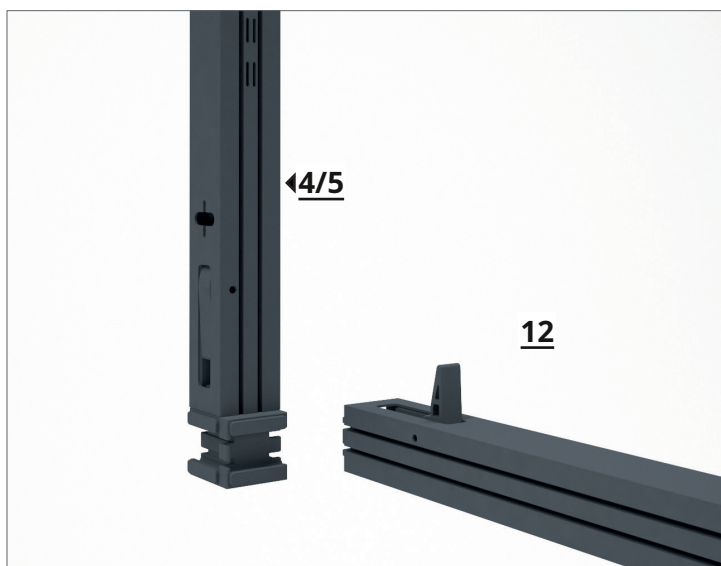

STEP 12(SEE STEP 8.)

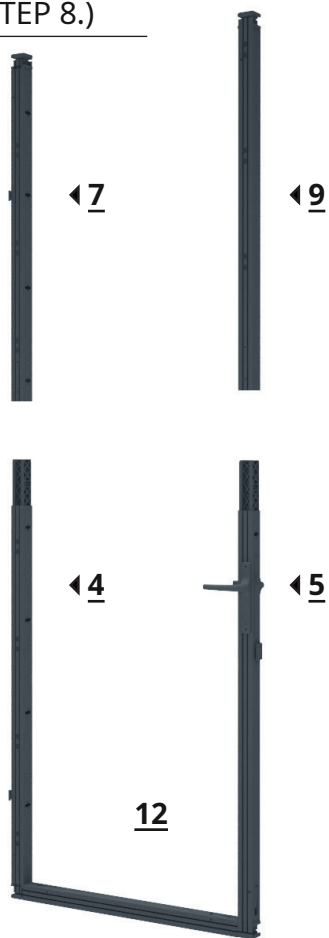


STEP 13

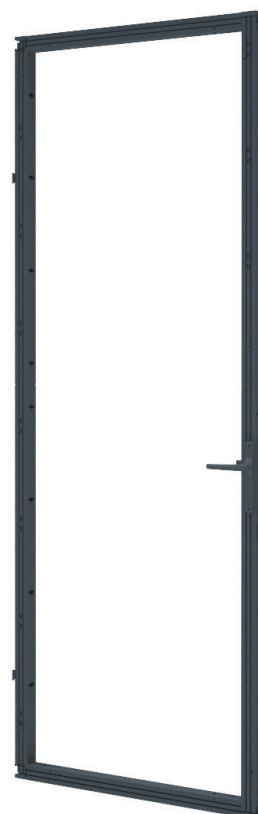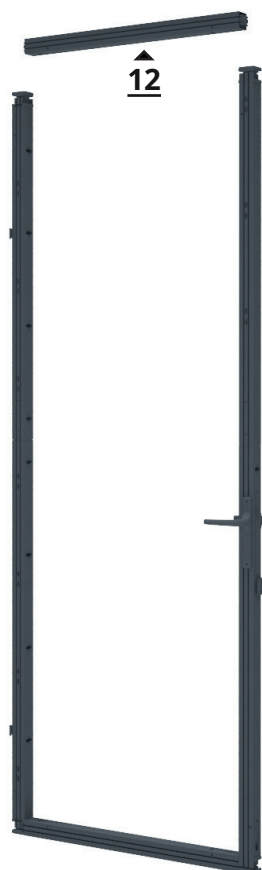

STEP 14


15

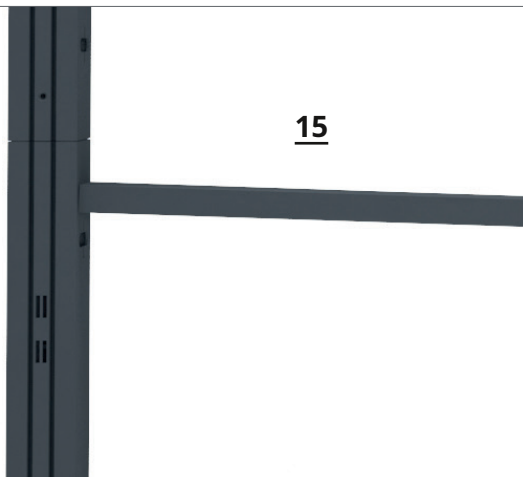

15



14

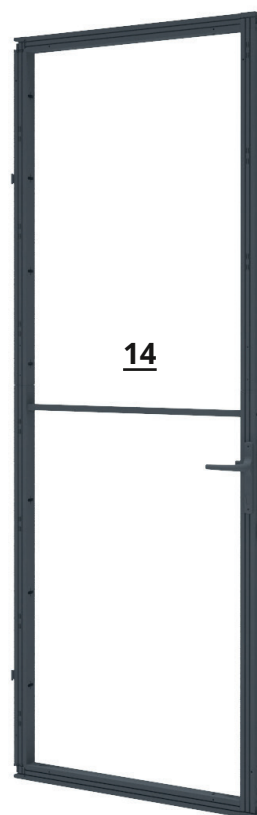


STEP 15

16A




16B

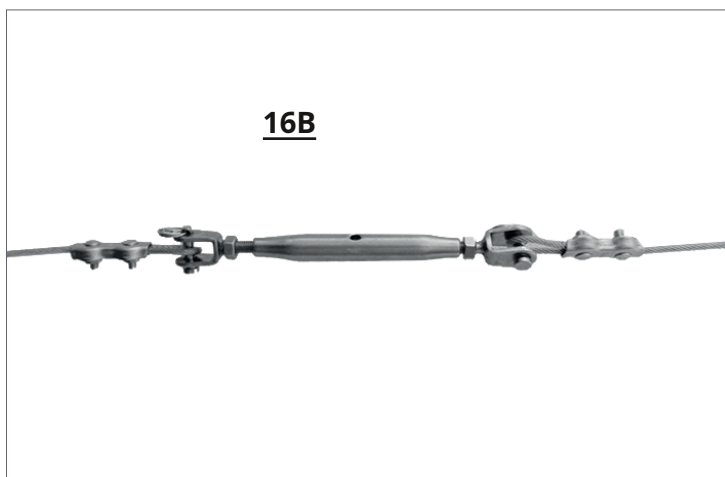


16A

16B

16A

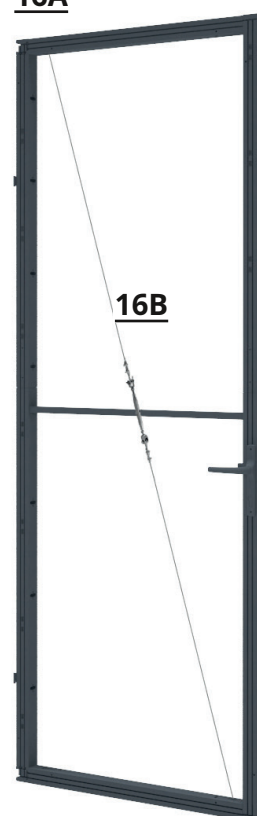


STEP 16

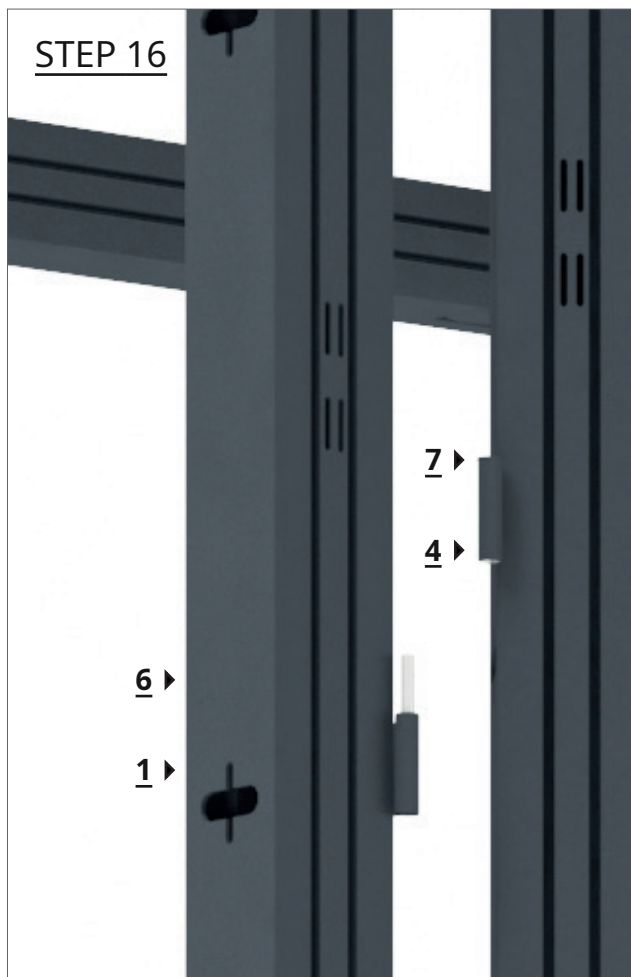

INSTRUCTIONmultiframe

LET'S ATTACH THE GRAPHICS STARTING FROM THE CORNERS. UP AND DOWN.
CORRECT ARRANGEMENT OF GRAPHICS.

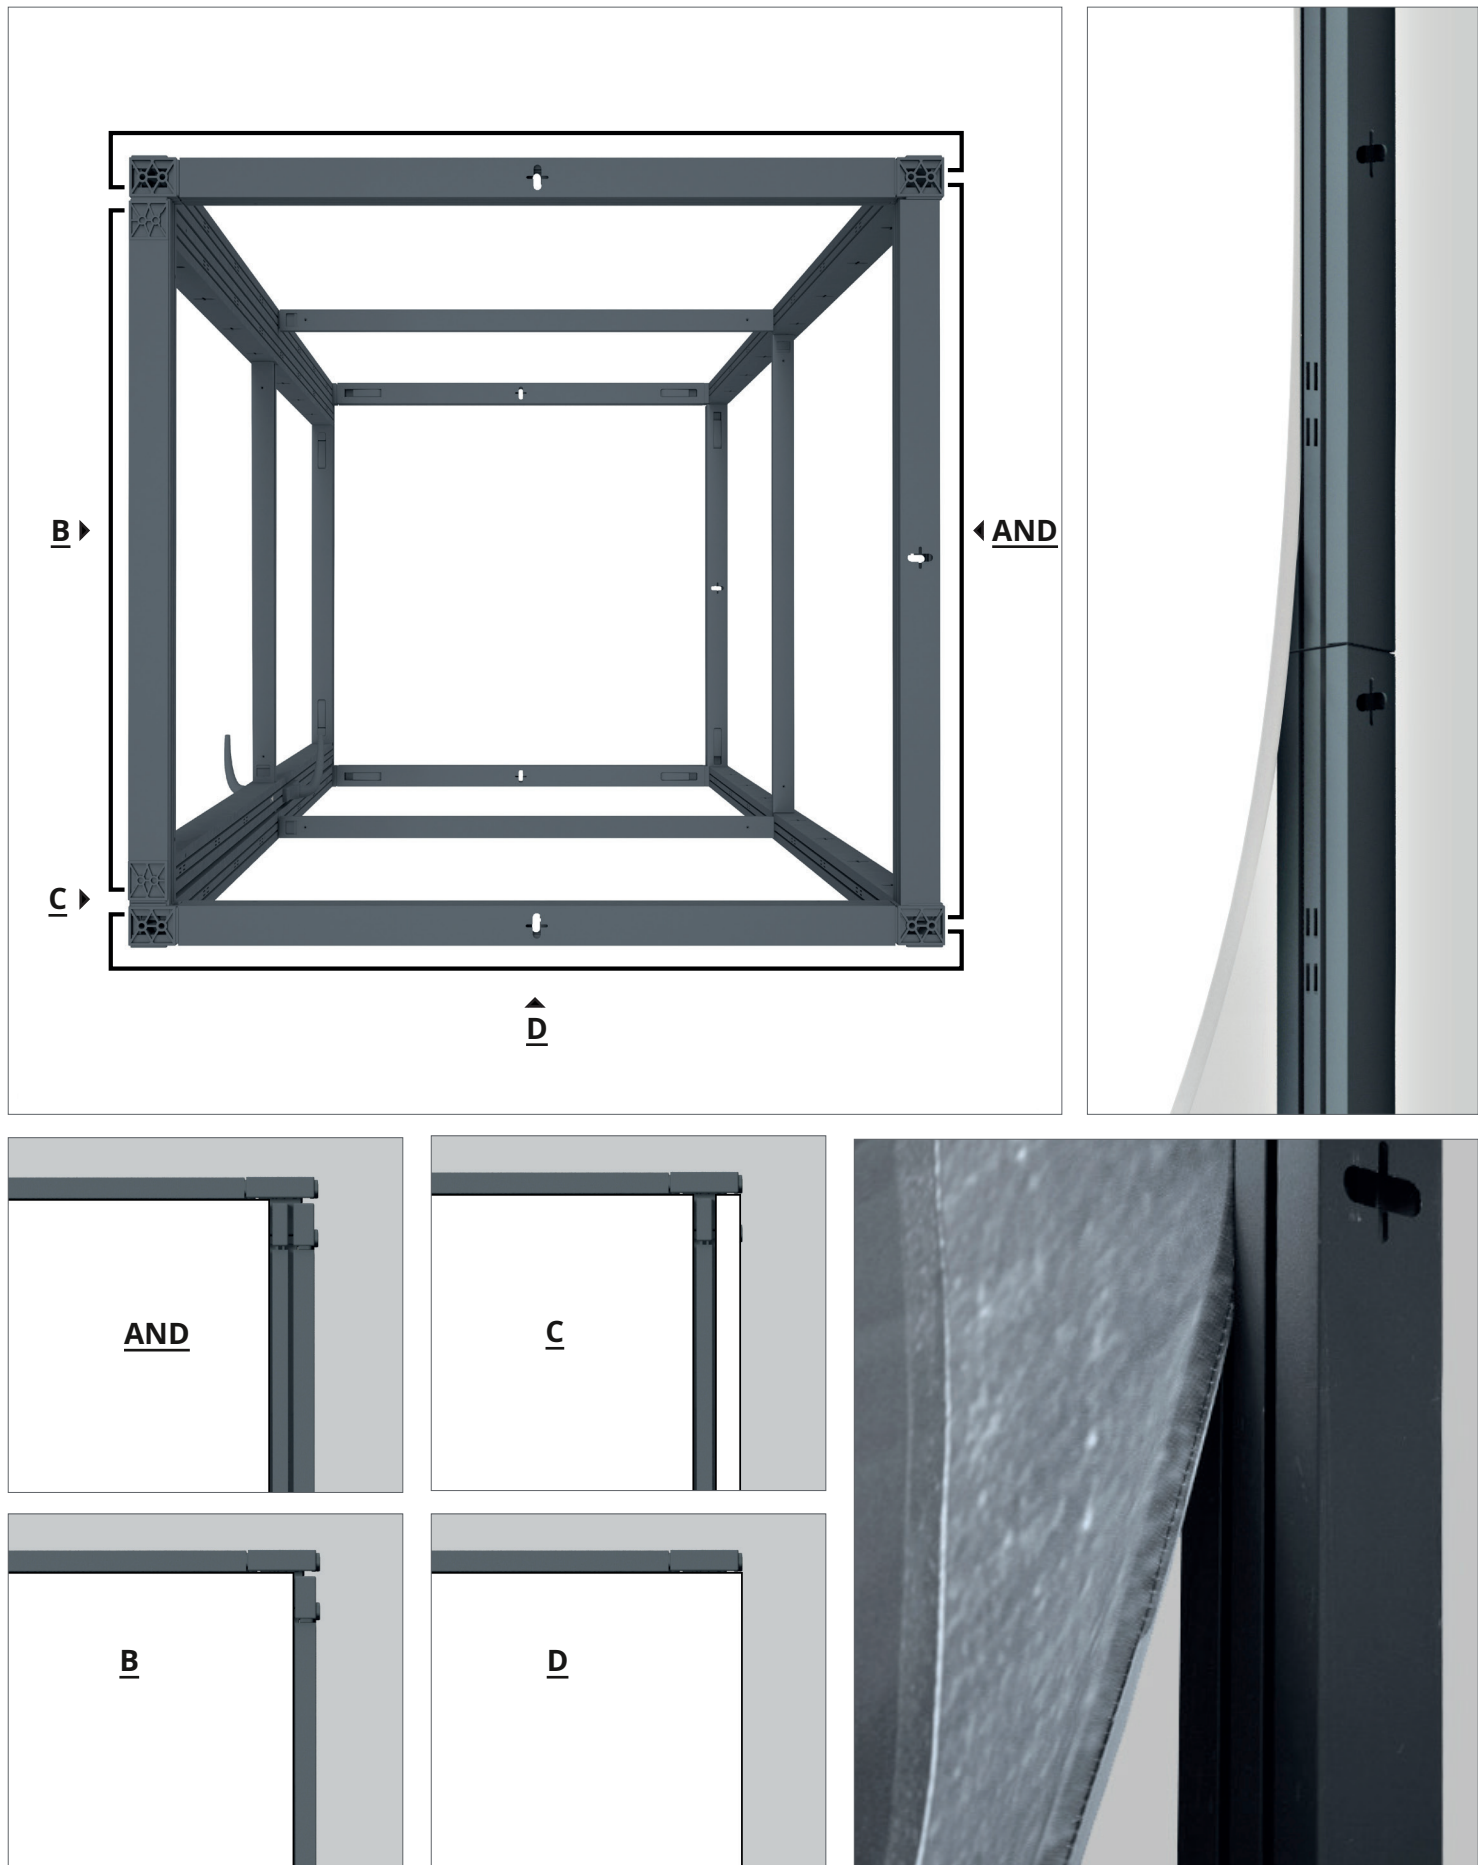

CONNECTING THE COUNTER AND STRAIGHT WALLS

